

**WARNING:**  
To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

**CAUTION:**  
Use of any controls, adjustments or procedures other than those specified within this manual may result in hazardous radiation exposure.

Caution marking and rating plate are located at bottom of product.



**CAUTION** - TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

**CAUTION** - DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

**CAUTION** - TO REDUCE THE RISK OF FIRE, DO NOT PLACE ANY HEATING OR COOKING APPARATUS BENEATH THIS UNIT.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The house with an arrowhead symbol is intended to alert the user to use the transformer in normal indoor temperatures, not extreme temperatures.

### Special Care & Handling

- Avoid rough handling; do not bump or drop.
- Avoid extreme temperatures.
- Clean using only a slightly damp cloth. Do not use cleaners with harsh chemical agents or detergents.
- To avoid damaging the unit, never place it near radiators, in front of heating vents, in direct sunlight, or near water.

### Limited 90-Day Warranty

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address below. The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of the top panel voids all warranties. This warranty does not cover cost of repairs made or attempted outside of the factory. Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States is:

**Excalibur Electronics, Inc.**  
13755 SW 119th Ave.  
Miami, FL 33186 U.S.A.

Ship the unit carefully packed, preferably in the original carton, and send it prepaid and adequately insured. Include a letter detailing the complaint, along with your daytime telephone number, inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

PLEASE DO NOT SEND YOUR UNIT WITHOUT RECEIVING AN ESTIMATE FOR SERVICING. WE CANNOT STORE YOUR UNIT!

[trademark] gifts™

**EXCALIBUR**  
ELECTRONICS, INC.

Excalibur Electronics, Inc.  
13755 SW 119th Avenue • Miami, FL 33186  
Tel: 305.477.8080 • Fax: 305.477.9516 • www.ExcaliburElectronics.com

[TRADEMARK] GIFTS is a trademark of Excalibur Electronics, Inc.  
Actual product may differ slightly from photograph.



[trademark] gifts™



WHISTLE KEY FINDER



MODEL # 8511

OPERATION MANUAL

[trademark] gifts™

WHISTLE KEY FINDER

## OPERATION MANUAL

### Introduction

Congratulations on your purchase of Excalibur Electronic's [trademark] gifts™ WHISTLE KEY FINDER.

Never lose your keys again! Whistle loudly and your key ring will give off a distinctive sound to instantly alert you where your keys are. The Whistle Key Finder also contains a clock with alarm and date function, detachable key rings, and a super bright LED flashlight.

This package includes one [trademark] gifts™ WHISTLE KEY FINDER and user's guide.



### Using Your [trademark] gifts™ WHISTLE KEY FINDER

#### WHISTLE KEY FINDER

Whistle loudly to activate the key finder to sound. The responsive distance depends on the environment. A noisier environment will require a shorter distance between you and the Whistle Key Finder.

**NOTE:** On occasion, other sounds such as music, television, or other background noises may have the same pitch as your whistle and may activate your Whistle Key Finder.

#### LED Flashlight

Press the LIGHT button to turn on the LED light and release to turn off.

#### Detachable Key Ring

Pull backward on the LOCK button to open the lock and take out the key rings. Release the button to re-engage the lock.

#### LCD Alarm Clock

##### Real Time Setting Mode

In Real Time mode, the clock will show the current time. Press MODE button to change the current time, alarm time, current date and second display.

In Real Time mode, press the SET button four times to enter the Normal Time Setting mode—the month will be displayed.



Press MODE button to set the month, press the SET button to enter the date—the date will be displayed.



Press MODE button to set the date, press the SET button to enter the hour setting and the hour will be displayed.



 
Press MODE button to set the hour. Press MODE button continuously to advance and toggle the 12 and 24-hour format. In 12-hour format, the "A" or "P" will be shown the "A" means AM and "P" means PM. In 24-hour mode, "H" will be shown. After setting the hour, press the SET button to enter the minute setting and the minutes will be display.




Press MODE button to set the minute. After setting the minute, press the SET button to exit the current time setting. When the current time is displayed on screen press the MODE button to confirm and set the current time.

#### Alarm Clock Setting


In Real Time mode, press the SET button once to enter the Alarm Time Setting mode. After entered this mode, an icon "AL" will be displayed and the alarm hour and minute will flash.



 Press MODE button to select the alarm on/off and/or chime on/off. If the alarm is enabled, a bell symbol will be seen. If the chime is enabled, a sound wave icon will be seen.



 After setting the alarm and chime, press the SET button to enter the alarm hour setting and the alarm hour will flash.



Press the MODE button to set the alarm hour. Press the SET button to enter the alarm minute setting and the alarm minute will flash.



After setting the alarm minute, press the SET button to confirm the setting and return to current time mode.

#### Battery Information:

Battery Rating  
Operating voltage: 3.0V  
Battery: AG13/LR44 x 2 (included)

Battery Safety Information  
Please keep this information for further reference.

- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not use rechargeable batteries.
- Remove exhausted batteries from the unit to avoid battery leakage.
- Do not short-circuit battery terminals.
- Remove batteries and store them in a cool, dry place when not in use.
- To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge alkaline or other non-rechargeable batteries.